

Application instructions T-Shirt transfer - Light Textile Transfer Paper 140 (4234)

PLEASE READ INSTRUCTIONS THOROUGHLY BEFORE BEGINNING!


- Light coloured fabrics must be minimum of 50% cotton
- Wash fabric before transferring
- Do not use an ironing board
- **Do not use steam** - empty the water out before ironing
- Avoid fingerprints both before and after printing
- Curled or damaged sheets should not be use
- Use in well ventilated areas
- Adult supervision is recommended for children

Printing procedure

Printer settings	Set printer to mirror-image and follow printer settings listed on Sihl website for your printer
Image	To ensure correct size, test on paper before printing onto the film
Drying time	Leave to dry for min 10 minutes before transferring

Transfer

Iron temperature	Setting cotton – ensure the iron is not too hot by ironing a plain sheet of paper (should not turn yellow)
Image preparation	Trim the image down, rounding of all edges - leaving a 3-4 mm edge all the way around. Position image face down on the fabric.
Ironing of fabric	Follow the diagram below or check out our application videos at www.sihl.com 6 & 7 - use circular motions and upper body strength to iron over the image Guideline to ironing time: A4 size - 180 sec / A5 size - 90 sec / A6 size - 30 sec. Irons with steam holes need slightly longer
Removing the tissue paper	Leave fabric to cool completely before peeling of the release liner. After removal, place the tissue paper provided on the image and iron again to soften the film and reduce the sheen

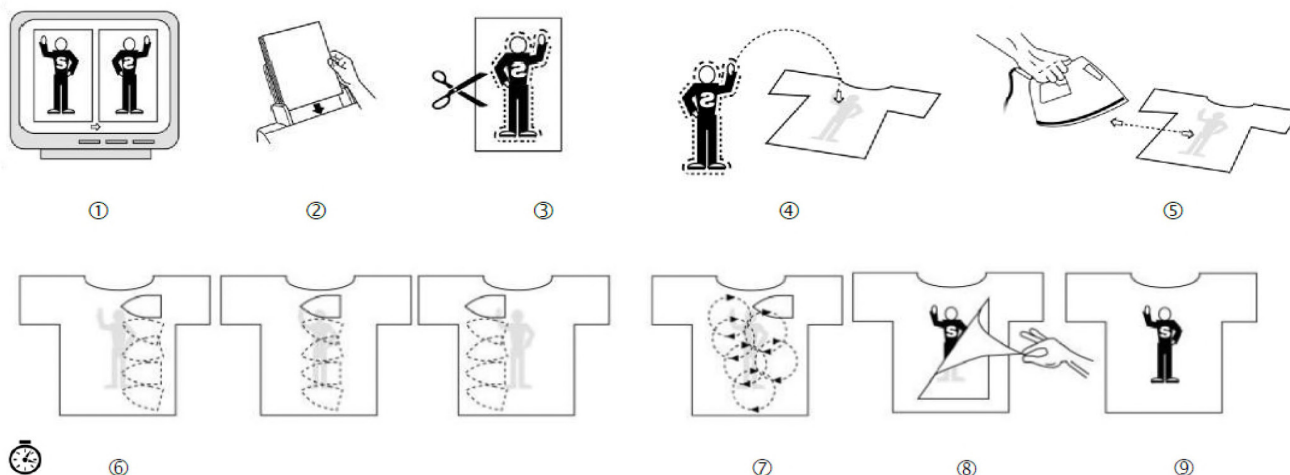

Aftercare tips

Washing & drying	• Wait at least 24 hrs after transfer printing before washing • Wash inside-out • Machine settings = max 30°C / 1000 rotations/min. • Do not use softener or bleach detergents • Remove from the machine as soon as cycle has finished • Drying - Tumble dryer with cool settings
Ironing	Maintain excellent colours by ironing after every wash – always with baking paper never iron the unprotected transfer. Do not use steam!