


T-Shirt Transfer - Printing and printer settings

General information to printing

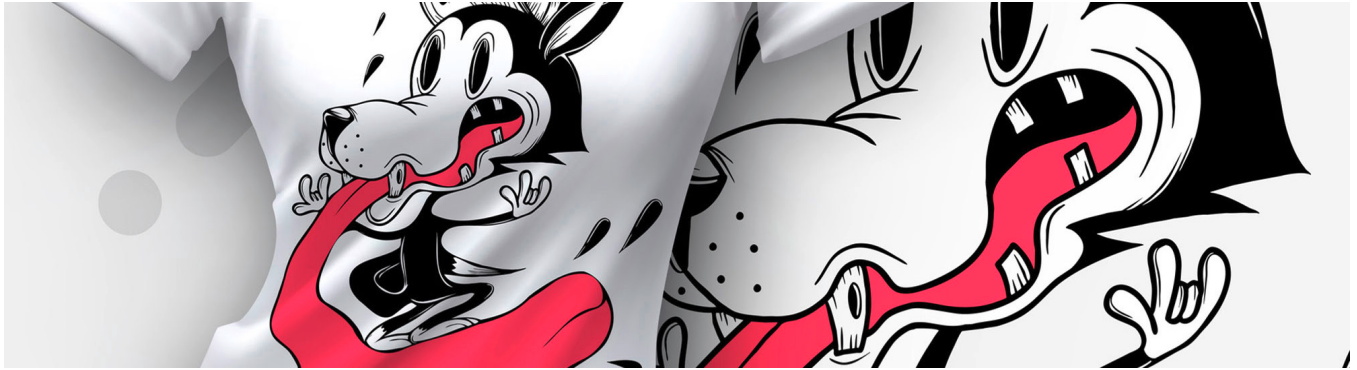

Recommended printer settings refer to the latest printer drivers available and are based on achieving optimal print quality for a photorealistic image. For different types of application, different printer settings may apply.

Tips:

- Load the paper into your printer, the matt side is coated side, the reverse is printed with blue squares (dark fabrics) and red squares (light fabrics)
 - ⇒ Front load printers - load printable side down
 - ⇒ Top load printers - load printable side facing you
- Single sheet feeding is recommended
- Follow the printer settings listed below for your printer - if your printer is not listed, please choose setting for a similar printer
- Drying times depend on the printer, ink brand, ink coverage and room conditions
- Do not touch printed surface

Printer settings

Printer	Media type	Print quality	Dark 4232	Light 4234*
Epson 4 colour WF 2630 SP 322	Plain paper	High		Mirror image*
Epson 6 colour L800 XP750 XP15000 Stylus Photo 1500W	Plain paper	Fine Photo High Fine	Under colour control lo- wer the density value [-12]	Mirror image* Under colour control lo- wer the density value [-12]
HP Envy 5640 Officejet 7000 Wide format PhotoSmart 6510	Plain paper	Optimal		Mirror image*
Canon IP7250 IX6550	Plain paper	High		Mirror image*

*Transfer paper must be printed mirror image; some printers allow mirror image in settings - if not then it is important to mirror image your design/photo/ image within the file before sending it to the printer to be printed. **NB: Sihl recommends the use of original inks.**

N.B

This information corresponds to the best of our current knowledge and is a guide, without obligations, to our products and their application possibilities. Our findings do not exonerate personal testing and checks. We reserve the right to adapt our information to serve product improvements.

Sihl GmbH
Kreuzauer Str. 33
52355 Düren/Germany

www.sihl.com

